

- **Distance display when resetting oil service or inspection interval**

The distance shown in the reset menu is shown in "km" on the E46 and in "l" (litres) on E38, E39, E53 vehicles. This corresponds to the cumulative fuel consumption for the distance.

- **Brake fluid renewal timing display**

The timing shown in the reset menu is shown as "Month.Year" on the E46 and in "d" (days) on E38, E39, E53 vehicles. This corresponds to the number of days until the renewal is due. When the system is reset, two years are added to the current date.

- **Minimum values for repeated resetting**

The system can only be reset anew after the following minimum values have been exceeded:

Oil service or inspection:

after 10 litres have been consumed on E46 vehicles,

20% of the cumulative fuel consumption on E38, E39, E53 vehicles

Brake fluid renewal:

20 days on all vehicles

If the display shows "Reset" or "Re" when resetting, the minimum values have been exceeded and the system can be set again.

- **Premature termination of SIA reset procedure**

It is possible to terminate the reset procedure prematurely by changing the position of the ignition key.