




Warning!

Version with xenon headlights: Danger to life due to high voltage! Therefore, before removing, disconnect all components from the power supply (lighting system and ignition off).


Work on the entire xenon lighting system (control unit, ignition unit and lamp) may only be carried out by specialist personnel.

Follow instructions for handling light bulbs (exterior lights).

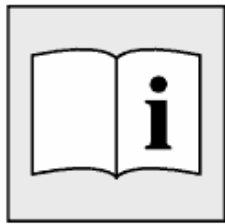

Necessary preliminary tasks:

- Remove ignition unit for xenon headlight

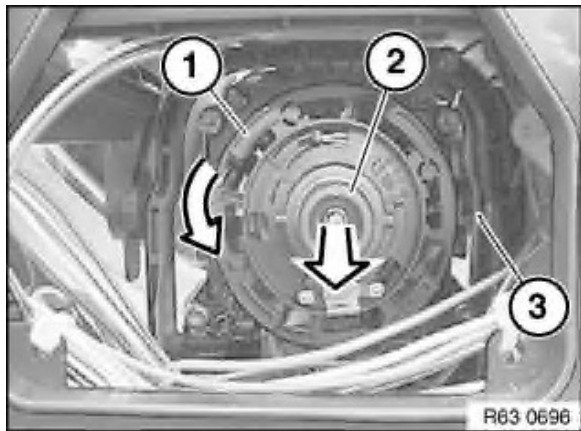


Turn retaining ring (1) in counterclockwise direction and remove.

Remove bulb for xenon headlight (2) in direction of arrow from headlight (3).

Installation:

Insert bulb for xenon headlight (2) exactly in headlight (3). Note type of bulb.

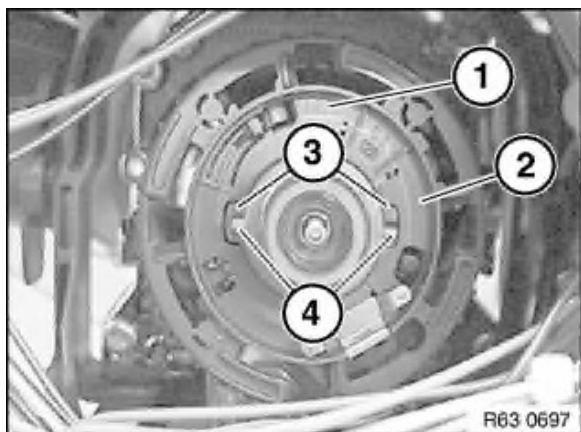

Installation:

Pay attention to marking (1).

Fit retaining ring (2) on headlight is such a way that apertures (3) slide over fixtures for ignition unit (4).

Make sure retaining ring (2) is correctly engaged on headlight.