
**Special tools required:**

- 64 1 020

**Important!**

Follow instructions for handling light bulbs (exterior lights).

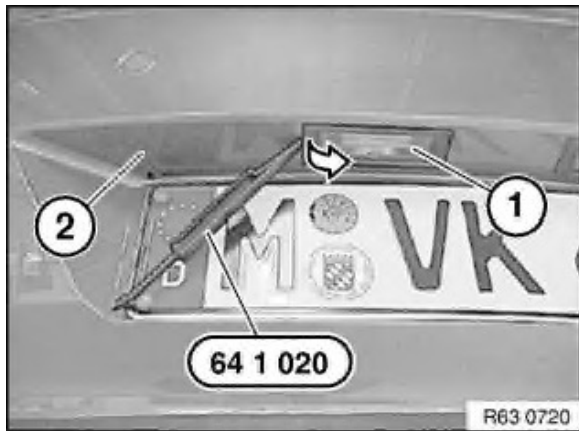

Lever license plate light (1) with special tool 64 1 020 out of rear bumper trim (2).

Unlock plug connection underneath and disconnect.

Remove license plate light (1).

Replacement:

If necessary, remove bulb.

Note type of bulb.