

- Turn the ignition key to the "0" position.
- Press and hold the trip meter button (in the instrument cluster) and turn the ignition key to "1".
- Hold the button pressed for approx. 5 seconds longer, until the following appears in the display:
"Oil service" or "Inspection" with "Reset" or "Re"
- Press the button again and hold for about 5 seconds until the display "Reset" or "Re" flashes.
- While the display is flashing, press the button briefly to reset the service interval.
After the display has briefly shown the new interval, it will change to the brake fluid renewal interval. The following will appear in the display:
Clock symbol and "Reset" or "Re"
- Press the button again and hold for about 5 seconds until the display "Reset" or "Re" flashes.
- While the display is flashing, press the button briefly to reset the brake fluid renewal interval.
After the display has briefly shown the new interval, it will change to the following display for about 2 seconds:
"END SIA"

Note:

Additional information concerning resetting the SIA (see Enclosure 4)