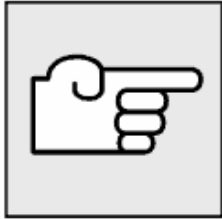
**Special tools required:**


- 54 3 000

*Note:*

Observe body gap dimensions for ideal adjustment of convertible top in relation to body.

Convertible top fins must be vertical during the adjustment operation.

Convertible top is not screwed down during the adjustment operation.

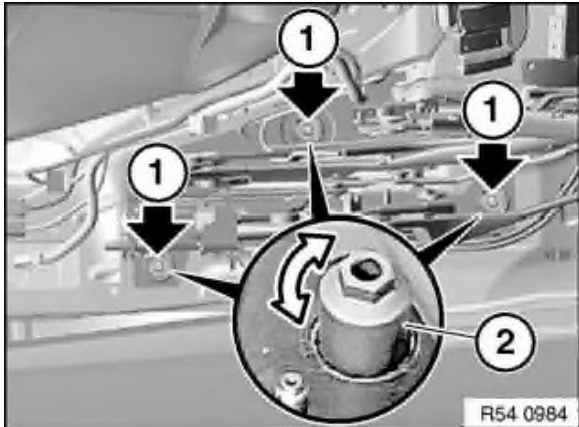**Height adjustment:**

Turn adjusting sleeves (1) for height adjustment with special tool 54 3 000 .

(1) Adjusting sleeves and retaining pins for height adjustment


(2) Special tool

- Turn counterclockwise = lower convertible top

- Turn clockwise = raise convertible top


Longitudinal and lateral adjustment:

The elongated holes on the main bearing allow the convertible top to be adjusted in the longitudinal and lateral directions.

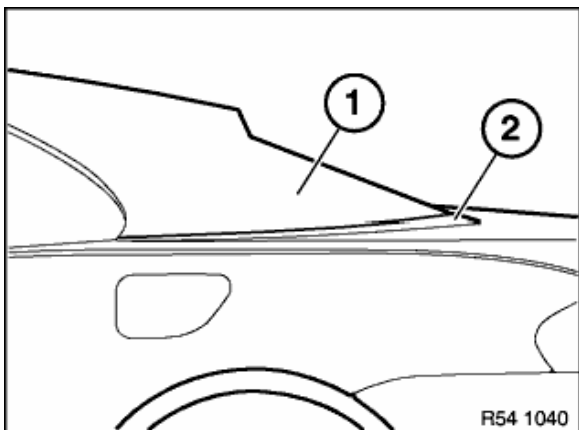*Note:*

After settling procedure, make sure there is a uniform gap between convertible top (1) and convertible top compartment lid trim (2).

Gap dimension = 3 ± 2 mm

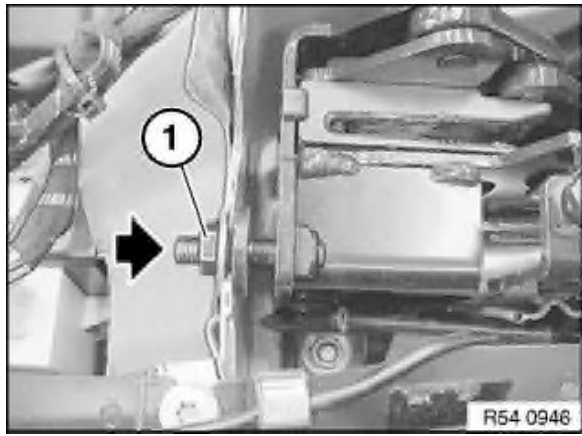

Fixing convertible top adjustment made:

Lock inner bolt and tighten down adjustment nut (1).

Important!

Before carrying out function checks, screw down convertible top.